


MASTERFLEX 900 with Accessories




Secure section with tape before cutting




Cut to desired length

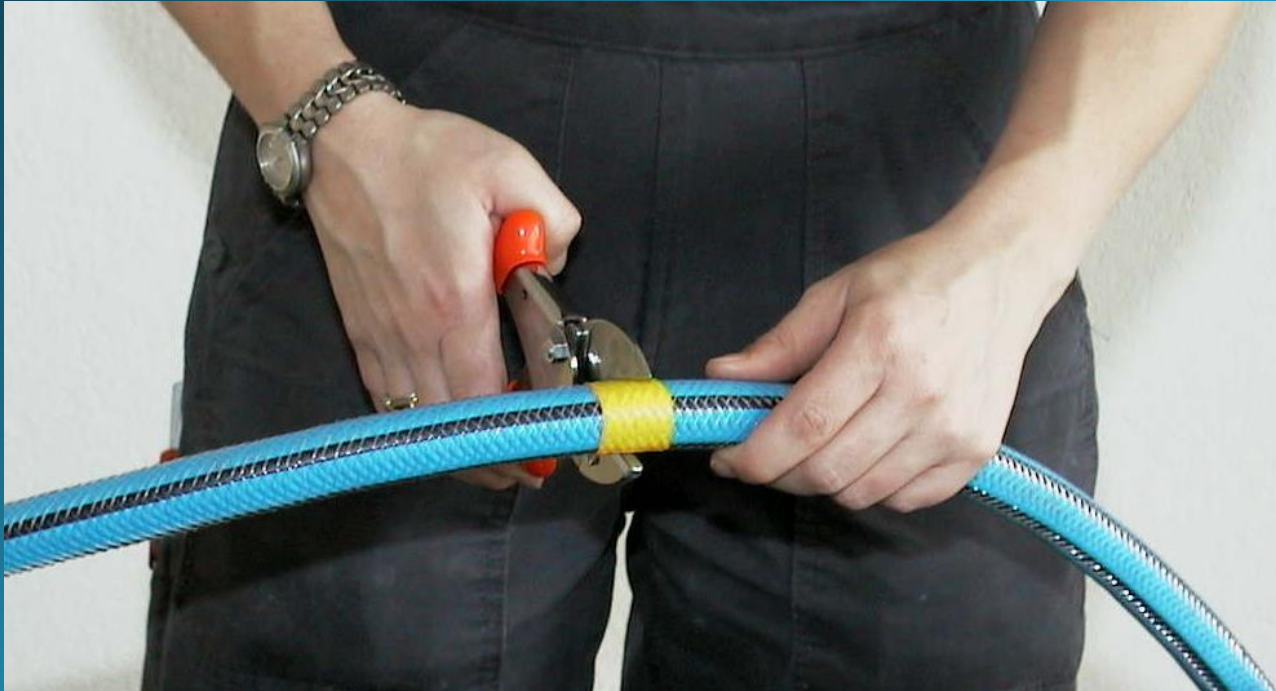

Vertical cut / 90° angle

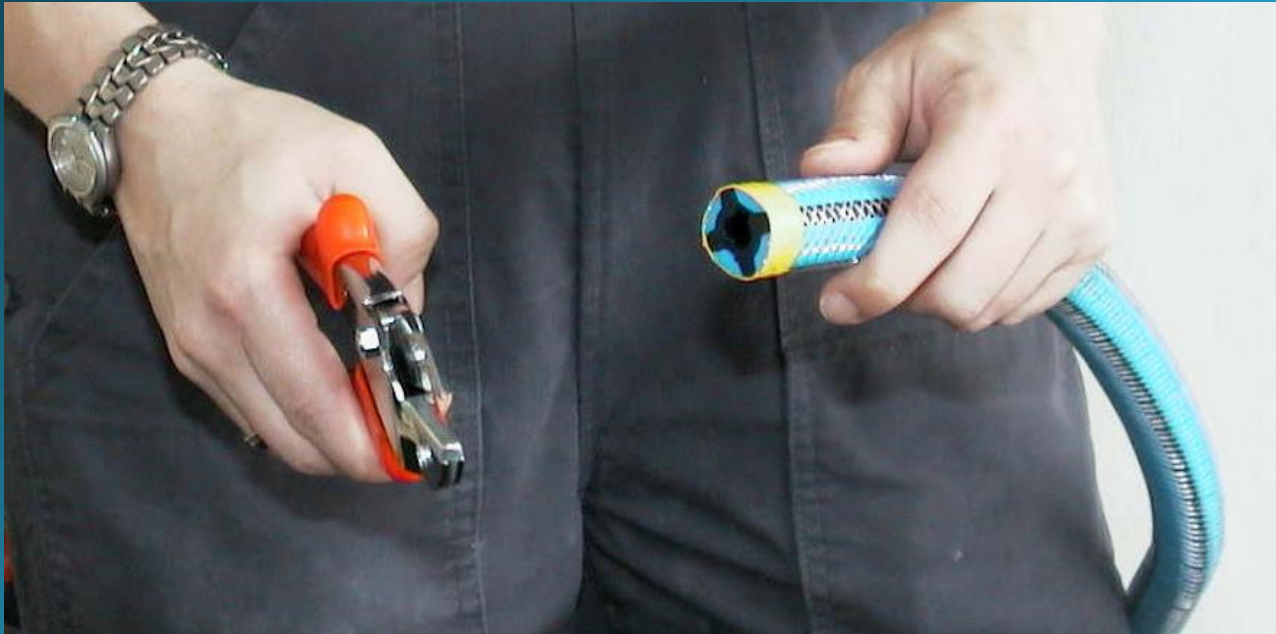

Insert nozzle

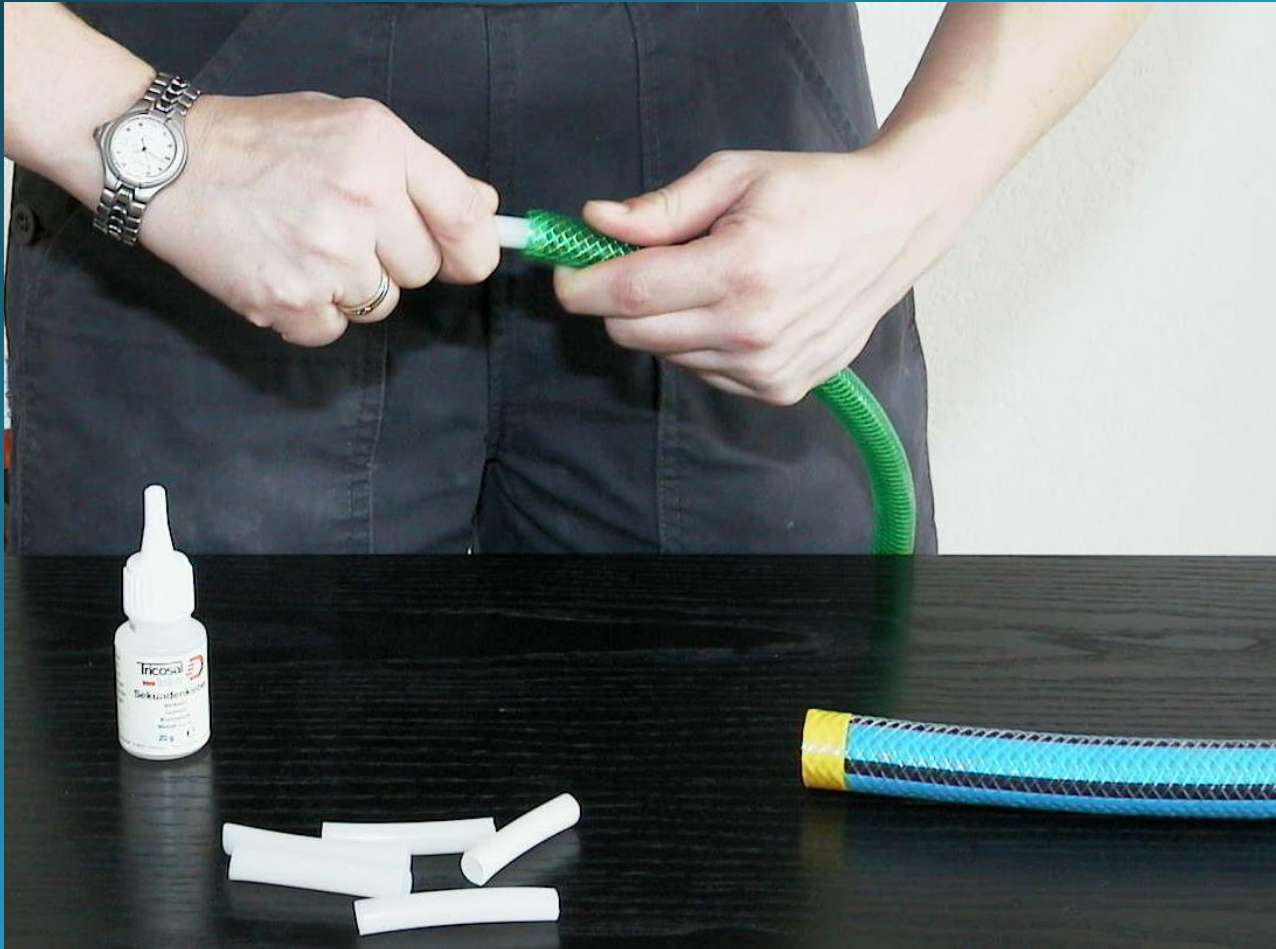

Secure with rapid glue



Place shrink sleeve over MF 900




Secure vent hose with rapid glue



Position shrink sleeve in centre



Heat shrink sleeve for tight fit

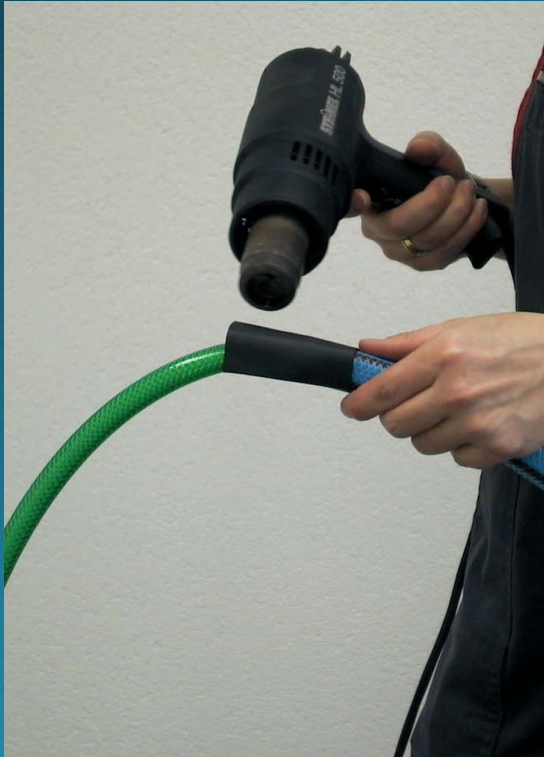

Almost done



Always use plugs to close hose



Required tools

